

June 6th 2018



What Ports to Forward for Remote Access When setting up a NVR/DVR for Remote Access you will need to forward the below ports to the NVR/DVR:

Minimum Requirements:

Device Port 8000 TCP/UDP

RTSP Port 554 TCP/UDP

Optimum Requirements:

Device Port 8000 TCP/UDP

RTSP Port 554 TCP/UDP

Web Port 80 TCP

When setting up an IP Camera for direct Remote Access you will need to forward the below ports to the camera:

Minimum Requirements:

Device Port 8000 TCP/UDP
8200 TCP/UDP

RTSP Port 554 TCP/UDP

Optimum Requirements:

Device Port 8000 TCP/UDP
8200 TCP/UDP

RTSP Port 554 TCP/UDP

Web Port 80 TCP